

---

OPERATION  
INSTRUCTIONS FOR THE

**WILCOX<sup>®</sup>**

**CONFIGURATION OF  
UNITY TACTICAL'S  
AXON<sup>™</sup>**

**Configuring an  
AXON<sup>™</sup>-to-RAID Xe<sup>™</sup> Connection**



**AXON<sup>™</sup>**



**AXON<sup>™</sup> XL**



**CAGE: 004F1**

**EAR99 NLR: No Export License Required.**

---

## **CONFIGURATION**

A Wilcox UNITY® Junction Box (PN: 65337G01) is required to connect the AXON™ or AXON™ XL to these **RAID Xe**s:

- 65300G12     **RAID Xe** Low Power (Red Laser)
- 65300G14     **RAID Xe** High Power (Red Laser)
- 65300G18     **RAID Xe** High Power (Green Laser)

Please contact Wilcox Customer Service at +1-603-431-1331 or via the website at [www.wilcoxind.com/contact](http://www.wilcoxind.com/contact) for more information.

---

### **NOTE**

---


**Make sure the AXON™ or AXON™ XL is connected to the RAID Xe before configuring. Refer to the RAID Xe Operator's and Maintainer's Manual (PN: [65300M05](#)), available on the Wilcox website.**

---

## **CONFIGURE AXON™** - CONFIGURE THE AXON™ FOR ***RAID Xe*** CONTROL


---

**Step 1.)** On the ***RAID Xe***, push the Up and Down Buttons simultaneously to access the Function Menu.

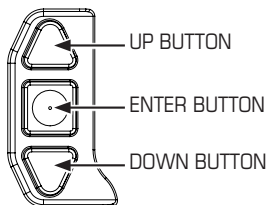

**Step 2.)** Push the Up or Down Button until **“Remote”** is highlighted on the Display, then push the Enter Button to select.

**Step 3.)** Push the Up or Down Button until the desired Button is highlighted or select Exit on the Display to return to the Function Menu, then push the Enter Button to select.

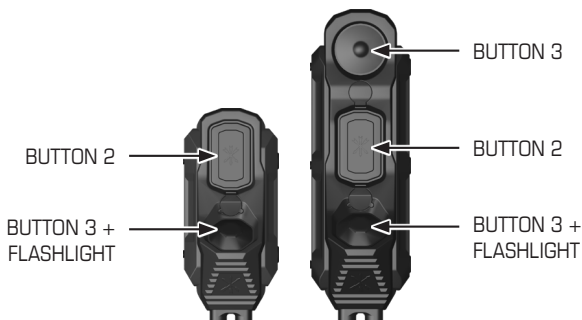

---

**Step 4.)** Push the Up or Down Button until the desired option is highlighted on the Display, then push the Enter Button to select.


| <b><u>OPTION</u></b> | <b><u>DESCRIPTION</u></b>                                     |
|----------------------|---------------------------------------------------------------|
| <b>AL V</b>          | Low Power VIS<br>Aiming Laser                                 |
| <b>AL I</b>          | Low Power IR Aiming<br>Laser                                  |
| <b>IL I</b>          | Low Power IR<br>Illuminator                                   |
| <b>ILrL</b>          | Low Power IR LED<br>Illuminator                               |
| <b>DL I</b>          | Dual Low IR Laser and<br>Illuminator                          |
| <b>AH V*</b>         | High Power VIS<br>Aiming Laser                                |
| <b>AH I*</b>         | High Power IR Aiming<br>Laser                                 |
| <b>IH I*</b>         | High Power IR<br>Illuminator                                  |
| <b>DH I*</b>         | Dual High Power IR<br>Laser and Illuminator                   |
| <b>Fire</b>          | Activates current laser<br>selected by the switch<br>position |

\*In Low Power switch positions, High Power laser configurations will be limited to the maximum Low Power setting.

**Step 5.)** Push the Up and Down Buttons simultaneously to exit the Function Menu.

---

## ***DEFAULT BUTTON CONFIGURATIONS***

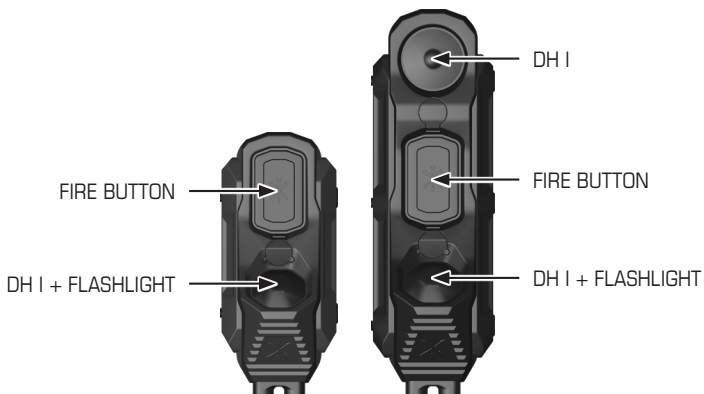

**Manufactured by:**

**WILCOX<sup>®</sup>**

**Wilcox Industries Corp.  
One Wilcox Way  
Newington, NH 03801 USA**

**Phone: +1 603-431-1331**

**Fax: +1 603-431-1221**

**WWW.WILCOXIND.COM**

**For troubleshooting service questions,  
contact Wilcox between 8am and 5pm EST.**

©2025 Wilcox Industries Corp. All rights reserved. Printed in USA. The WILCOX logo and the "X" icon are Federally Registered Trademarks of Wilcox Industries Corp. "RAID Xe" is a trademark of Wilcox Industries Corp. UNITY<sup>®</sup> is a registered trademark of UNITY Tactical, LLC. AXON<sup>™</sup> is a trademark of UNITY Tactical, LLC. All other trademarks and registered trademarks in this manual are the property of their respective companies. Specifications and other data are subject to change without notice.