



SWITCH™ RAIL

LOW SIGNATURE TASK LIGHT
Operating and Maintenance Instructions



Switch Operation

White/White Model

Single Tap - ON
- Two White 5mm LEDs

Single Tap - Off



Multi-Color Model

Single Tap - Primary LED / low output
Double Tap - Primary LED / high output
Hold - Secondary LED / one output level
Press after 2 seconds to turn light off



(2) 2016 Lithium Coin Cell Batteries

Battery Installation

1



2



3



4



5




6



Mounting

1

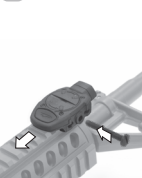

2



3



Operating And Maintenance Instructions

Battery Installation

See *Battery Installation Diagram*

- (2) 2016 coin cells

WARNING

Remove batteries during long periods of storage. Remove exhausted batteries from light immediately.

WARNING

Keep new and used batteries away from children and immediately dispose of used batteries. Even used batteries may cause severe injury or death. Do not dispose of batteries in household trash. Call a local poison control center for treatment information.

Switch Operation (White/White Model)

A single press of the button turns on the LEDs.

Any button press after 2 seconds turns the light off.

Switch Operation (Multi-Color Model)

A single press of the button turns on the primary LED in low output mode.

A double press of the button turns on the primary LED in high output mode.

Holding the button causes the secondary LED to turn on. The secondary LED has one output level. Continued holding switches back to the primary LED.

Any button press after 2 seconds turns the light off.

Troubleshooting

If the Switch Rail fails to light:

- Check the batteries for proper installation.
- Replace batteries if proper installation is confirmed.
- Check the light for water contamination. The light will resume normal operation once the water is shaken or blown out and the light is left open until completely dry. If the light has been contaminated with salt water, flush the unit with fresh water and dry as described above.

USA– International 1-Year Warranty

WARRANTY – Princeton Tec warrants this product to be free from defects in workmanship and materials under normal use for one year. This warranty covers all of the component parts of the product except batteries. This warranty does not cover

deterioration due to normal wear or damage due to misuse, alteration, negligence, accidents, or unauthorized repair. Princeton Tec will repair or replace parts which are defective in workmanship or materials.

Your authorized Princeton Tec Dealer and Princeton Tec are the only facilities authorized to repair the product. After (3) unsuccessful attempts (within the warranty period) to repair the product, you have the right to elect replacement of the product or a refund of the purchase price less allowance for use of the product. **NO INCIDENTAL OR CONSEQUENTIAL DAMAGES ARE INCLUDED IN THIS WARRANTY.** (Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Princeton Tec reserves the right to change product specifications without notice.

FOR CALIFORNIA RESIDENTS:

WARNING: This product contains Bisphenol A (BpA) a chemical known to the State of California to cause birth defects or other reproductive harm.

Return Policy

If your light fails to operate, follow these simple steps:

1. Check batteries. Replace if necessary.
2. To send your light in for repair or replacement, first contact Princeton Tec customer service on **1-800-257-9080** to request an RMA number. Please have your light model, date of purchase and a brief description of the fault you are experiencing. No warranty repairs will be accepted without an RMA number.
3. Return the light without batteries to: Princeton Tec, **PO Box 8057 Trenton NJ 08650**. Postage due and freight collect items will not be accepted.
4. Upon receipt your light will be processed in about two weeks. Please allow additional time for return transportation from NJ.

PO Box 8057,
Trenton, NJ 08650
Phone: 609-298-9331
princetonotec.com
© 2025 Princeton Tec

