

OPERATION AND MAINTENANCE
INSTRUCTIONS FOR THE


WILCOX®

ERGOCTO® 

**Control Activation Grip
1 Button Keypad, WX Connector**

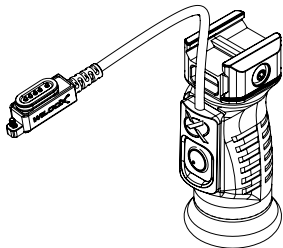

**65335634
SINGLE 12" CABLE**

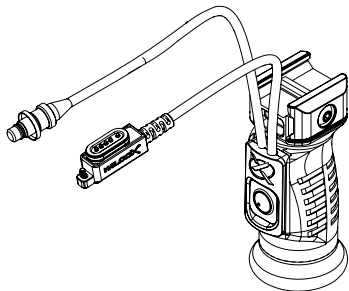

**65335636
DUAL 12" CABLE**



CAGE: 004F1

EAR Controlled: Commerce license may be required for export or re-export.

CONFIGURATION


The ERGOCTO Xe Control Activation Grip features a unique design that allows for up to eight (8) radial positions of the control button by the user. It mounts to the 3, 6, or 9 O'Clock position of a MIL-STD-1913 Rail, providing a low-profile stance that prevents snag hazard.

The single cable configuration connects securely to Wilcox laser products, while the dual cable configuration adds a tail-cap interface flashlight connection.

The assembly also features a stowage compartment for one (1) CR123 battery, accessed via a standard or extended End Cap.

ATTACH GRIP - ATTACH GRIP TO MIL-STD-1913 RAIL

Make sure the weapon is safe.

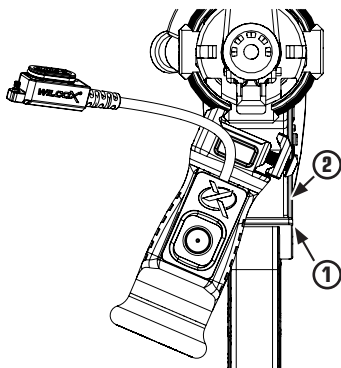

**MOUNTING TO 6 O'CLOCK
POSITION DEPICTED**

Turn the T20 Screw **(1)** three (3) turns CCW to loosen the Floating Rail Grabber **(2)**.


Position the Grip on the rail edge of the rail and pivot up, making sure the Floating Rail Grabber has engaged the rail.

Tighten the T20 Screw by turning CW until snug.

Gently pull on the Grip to make sure it is securely mounted, then re-snug the Screw.

TURN GRIP - TURN GRIP RADIALLY

Detach the Grip from the MIL-STD-1913 Rail for this procedure.

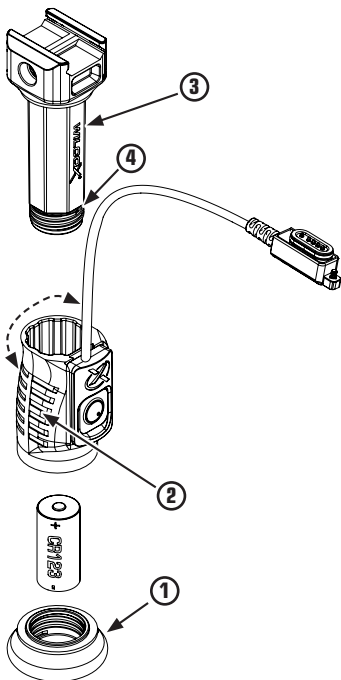

Turn the End Cap **(1)** CCW to remove.


Pull off the Grip Cover **(2)**.

Turn the Grip Cover to any of eight (8) positions.


Squeeze the Grip Cover while pushing it onto the Grip Assembly **(3)**, making sure not to damage the O-ring **(4)**.

Install the End Cap, turning CW to secure.

LENGTHEN GRIP - INSTALL LONGER END CAP

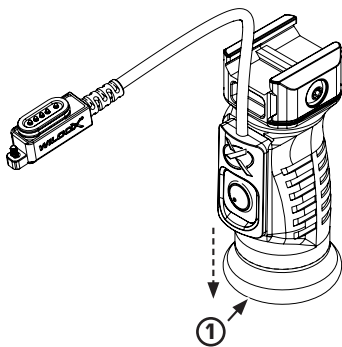

Turn the standard End Cap **(1)** CCW to remove.

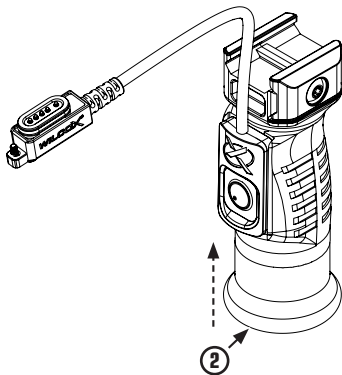

Install the extended End Cap **(2)**, turning CW to secure.

CARE AND MAINTENANCE

Clean the Grip by wiping down the assembly with a clean, damp cloth. If used in a saltwater environment, more frequent cleaning and drying after use is recommended. Make sure any cable connectors are kept dry.

WARRANTY CLAIM AND SERVICE INFORMATION

For warranty claim or service work, WX must be contacted in the United States at (603) 431-1331 or Customer Service through our online support page at wilcoxind.com/contact to obtain a **Return Merchandise Authorization (RMA)/Service Call Number (SC)** prior to returning your Wilcox product.

After an RMA/SC number is issued, WX will accept your package at the address indicated below, clearly marked with the RMA/SC number:

Wilcox Industries Corp.
RMA/SC # _____
One Wilcox Way
Newington, NH 03801 USA

The Wilcox product must be securely packaged to prevent damage, accompanied by your name, address, daytime phone number to contact you, and a description of the problem or work you wish to be performed.

Manufactured by:

WILCOX[®]

**Wilcox Industries Corp.
One Wilcox Way
Newington, NH 03801 USA**

Phone: +1 603-431-1331

Fax: +1 603-431-1221



SINGLE 12"



DUAL 12"

WWW.WILCOXIND.COM

**For troubleshooting service questions,
contact Wilcox between 8am and 5pm EST.**

©2021-2025 Wilcox Industries Corp. All rights reserved. Printed in USA. US PAT. **Web Link.**
The WILCOX logo, the "X" icon, and ERGOCTO are Federally Registered Trademarks of Wilcox Industries Corp. "Xe" is a trademark of Wilcox Industries Corp. All other trademarks and registered trademarks in this manual are the property of their respective companies. Specifications and other data are subject to change without notice.